


COOKER HOOD

# INSTRUCTION MANUAL

Read this manual carefully before operation

Pictures in this manual are for reference only, the product in kind prevail.

CHIM600RSS  
CHIM600RBLK

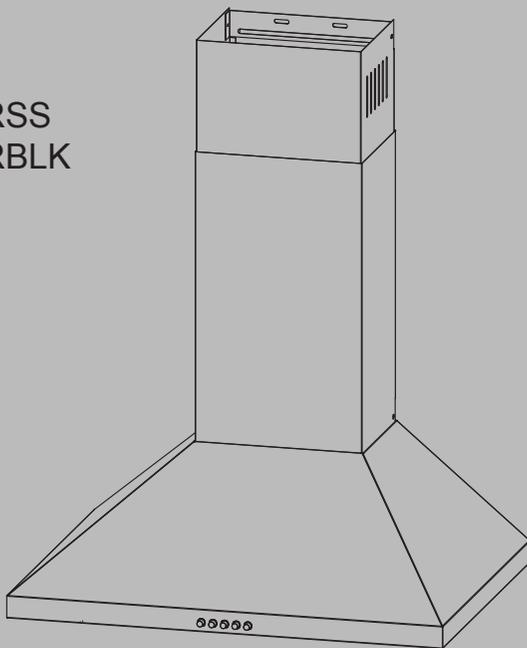

**belling**

<b>01</b>	Contents.....	1
<b>02</b>	Warnings.....	2
<b>03</b>	Safety Warning.....	3
<b>04</b>	Notice of Installation.....	4
<b>05</b>	Use.....	7
<b>06</b>	Maintenance.....	8
<b>07</b>	Trouble Shooting.....	9
<b>08</b>	Main Parameters.....	10
<b>09</b>	Disposal.....	10


# Warnings

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- There shall be adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels.
- The filter is made of high density aluminum.
- Please do not use corrosive detergent for cleaning. The proper function of the unit is conditioned by the regularity of the maintenance.
- To protect the main body from corrosion due to accumulation of grease and dust, the cooker hood should be cleaned with hot water with non-corrosive detergent every two months.
- There is a fire risk if cleaning is not carried out in accordance with the instructions.
- Never leave high naked flames under the hood when it is in operation.
- The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels.
- The minimum distance between the supporting surface for the cooking vessels on the hob and the lowest part of the range hood is 650mm.
- Regulations concerning the discharge of air have to be fulfilled.
- The appliance uses 4 hob elements at most.
- **CAUTION** : Accessible parts may become hot when used with cooking appliances.

- The appliance is not intended for use by young children or infirm persons without supervisions.
- Young children should be supervised to ensure they do not play with the appliance.
- Plug the power cord to socket outlet with earthing continuity terminal.
- The cooker hood is for home use only, not suitable for barbecue, roast shop and other commercial purposes.
- The cooker hood and its filter should be cleaned regularly according to the instruction.
- Do not use open flame, or allow oil to go beneath the appliance.
- If any fault occurs with your appliance, please call the aftersales department using the contact details at the back of this booklet.
- Please keep the kitchen room ventilated.
- Prior to any maintenance, cleaning operation, ensure the power is cut off.
- If the supply cord is damaged, it must be replaced by the manufacturer, service agent or similarly qualified person in order to avoid a hazard. The replaced power cord should be provided by manufacturer or seller.
- If the plug or cord is damaged, please call after-sale service center.
- There is a fire risk if cleaning is not carried out in accordance with the instruction.
- In case of damaged connecting wire, please refer to the manufacturer, after-sale service personnel or other qualified technicians.
- Use the unit according to the instructions to avoid any fire hazard.
- The exhaust air must not be introduced into a smoke flue or chimney that is used for exhausting fumes from appliances burning gas.
- Follow the local laws applicable for external air evacuation.

# Notice of Installation

- It can not share the same air ventilation tube with other appliance such as gas tube, warmer tube, and hot wind tube. There will be hazard of underpressure, combustion impaired and harmful gases drawn back.
- The bending of ventilation tube should be  $\geq 120^\circ$ , parallel or above the start point/should be connected to the external wall.
- Please make sure the installation plate is placed horizontally to avoid grease collection at one end. See Fig.1.

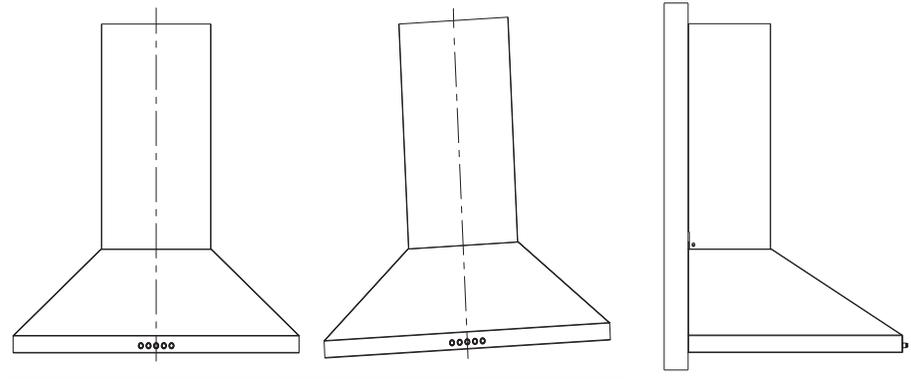

Right

Wrong

Fig.1

- After installation, make sure that plug can be pulled out if necessary.
- The cooker hood should be placed 650~750 mm up from the cooking plane for safe and a good effect. See Fig.2.
- There shall be adequate ventilation of the room when the cooker hood is working.

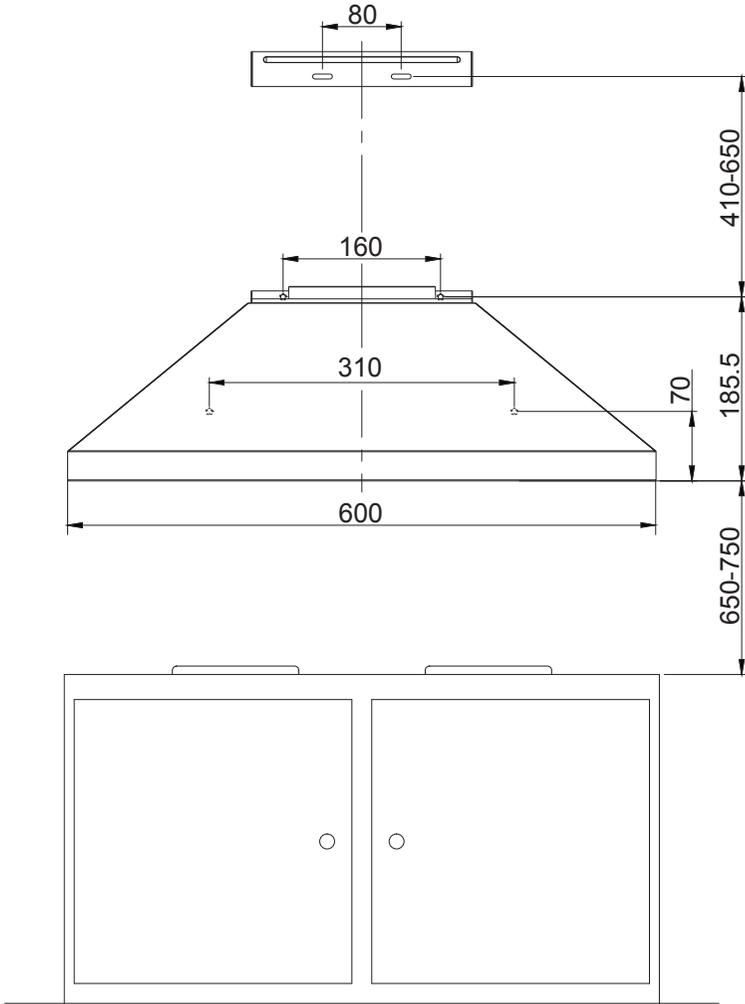


Fig.2

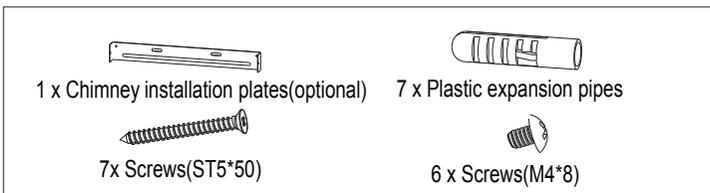


Fig.3

## Installation

- Accessories. See Fig.3. (Type and quantity of accessories is subject to actual demand.)
- Fix installation plate and screw two suspension screws (ST5\*50) into the plastic expansion pipes but keep 2mm outside , See Fig.4.
- Fix the exhaust pipe, See Fig.5.
- Hang range hood on the suspension screws. See Fig.6.
- After connecting the exhaust pipe well, lock screws (ST5\*50) to prevent the range hood from accidentally sliding off the suspension screws. See Fig.7.
- Fix the chimney. See Fig.8.
- Fix the extension chimney. See Fig.9.
- Remark: Extension chimney is not supplied with your appliance.

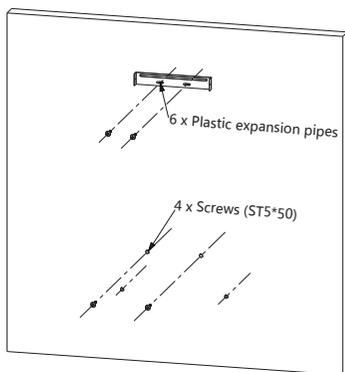


Fig.4

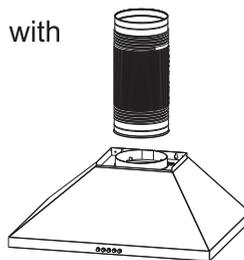


Fig.5

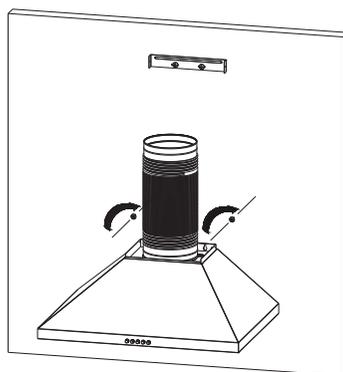


Fig.6

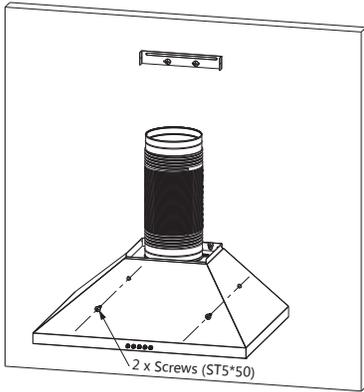


Fig.7

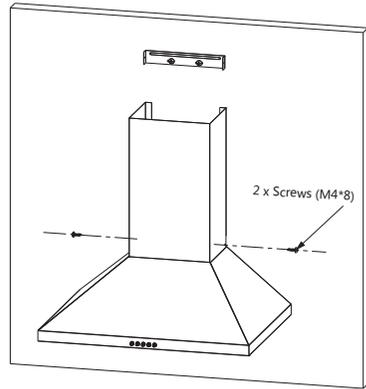


Fig.8

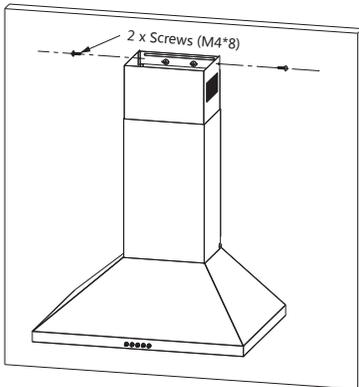


Fig.9

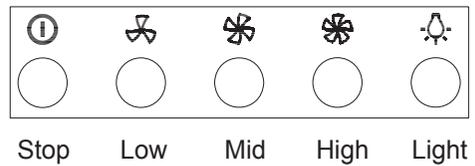


Fig.10

Use

Speed adjustment. See Fig.10.

- Press **Stop** button, the motor will stop running.
- Press the **Low** (speed) button, the motor runs at low speed.
- Press the **Mid** (speed) button, the motor runs at mid speed.
- Press the **High** (speed) button, the motor runs at high speed.
- Press the **Light** button, the two lighting lamps will come on.
- Press it again and the lamps will be turned off.

## Cleaning of the filters

- Removing the filters according to Fig.11.
- Put into a dishwasher with detergent, set the temperature below 60 degrees.
- Please do not use abrasive detergent for it will damage the hood.
- Make sure that the hood is shut off before cleaning.

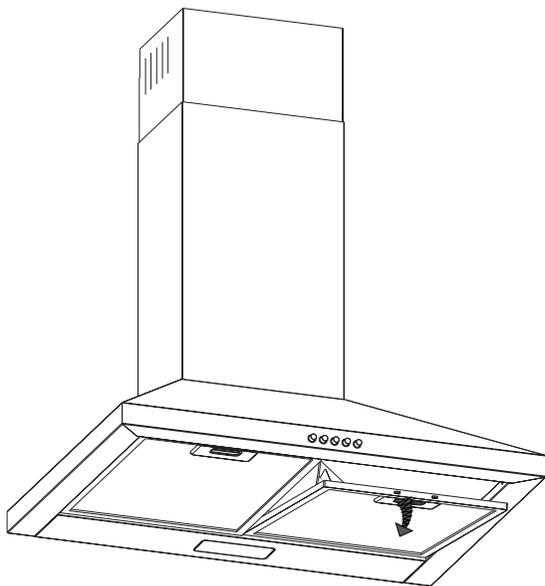


Fig.11

Fault	Cause	Solution
Light on, but motor does not work.	The blades are blocked.	
	The capacitor is damaged.	Replace capacitor.
	The motor is damaged.	Replace motor.
	The internal wiring of motor is cut off / disconnected. An unpleasent smell may be produced.	Replace motor.
Both light and motor do not work.	Apart from the above mentioned, check the following:	
	Light damaged.	Replace lights.
Oil leakage.	Power cord loose.	Connect the wires as per the electric diagram.
	Outlet and the air ventilation entrance are not tightly sealed.	Take down the outlet and seal with glue.
Vibration.	Leakage from the connection of U-shaped section and cover.	Take U-shaped section down and seal with soap or paint.
	The blade, if damaged, can cause vibrating.	Replace the blade.
	The motor is not tightly fastened.	Fasten the motor tightly.
Insufficient suction.	The cooker hood is not tightly fixed.	Fixed the cooker hood tightly.
	The distance between the cooker hood and the cooker top is too large.	Readjust the distance.
The machine inclines.	Too much ventilation from open doors or windows.	Choose a new place to install the appliance or close some doors / windows.
	The fixing screws are not tight enough.	Tighten the fixing screw and make it horizontal.
	The hanging screws are not tight enough.	Tighten the hanging screw and make it horizontal.


## Electrical Diagram

- Electrical diagram see label on main body of the actual product.

# Main Parameters

Voltage	220-240V~ 50Hz
Rated Power	116.5W
Lighting	1.5W
Motor Input Power	115W
Diameter of air tube	150mm
Airflow	400m <sup>3</sup> /h
Noise	68 dB(A)

The air flow parameter is tested under conditions of 230V~ 50Hz when the voltage is 220-240V~ 50Hz and without carbon filters.

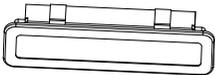	Max power	Voltage	Picture	Lamp Cap	ILCOS D code
Self-ballasted LED modules	1.5W	220-240V~	 Square/Diameter:33.2mmx120mm		DBS-1.5-H-33.2/120

## Disposal



Please dispose of it at your local community waste collection / recycling center and ensure it presents no danger to children while being stored for disposal. The plug must be rendered useless and the cable cut off to prevent misuse.

## Belling Customer Care

Please keep this handbook in a safe place. Please fill in the model number and serial number in the spaces provided below as they will assist us should you need to call.

01 8428288

When you dial this number you will hear a recorded message and be given a number of options. This indicates that your call has been accepted and is being held in a queue. Calls are answered in strict rotation as our Customer Care Representatives become available.

Enter appliance number here for future reference. These numbers can be found on your appliances.

<p><b>Model No.</b></p> <p>_____</p> <p><b>Serial No.</b></p> <p>_____</p>
--



Glen Dimplex Ireland

Airport Road, Cloghran, Co. Dublin

Web: [www.glendimplexireland.com](http://www.glendimplexireland.com)

Email: [serviceireland@glendimplex.com](mailto:serviceireland@glendimplex.com)

[sparesireland@glendimplex.com](mailto:sparesireland@glendimplex.com)

[salesireland@glendimplex.com](mailto:salesireland@glendimplex.com)